

TUBULAR & ÜBER FONTS WITH ECOSMART/ECOBOILER UNDERCOUNTER WATER BOILERS

TUBULAR & ÜBER FONTS WITH ECOSMART UNDERCOUNTER WATER BOILERS

TUBULAR FONT
1000584

DIMENSIONS

- Up to 3 fonts can be used on a single boiler (UC45 only)
- Quick and easy service for high volume environments

ÜBER FONT 2 BUTTON 1000812

DIMENSIONS

DIMENSIONS (LOW PROFILE)

- Available in two heights
- Sleek and stylish font for precise hot water delivery

SEE TABLE FOR PRODUCT DIMENSIONS

REQUIRED

| | | | |
|----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|
| ECOSMART UC4 1000750US | ECOBOILER UC4 1000747US | ECOSMART UC10 1000752US | ECOSMART UC45 1000754US |
|----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|

- 1, 2.6 or 11.8 gallons
- LCD screen for precise temperature control
- Portion dispense option
- Live temperature readout

ASSOCIATED PRODUCTS (SOLD SEPARATELY)

BOILERS

| NAME ORDER CODE | POWER | IMMEDIATE DRAW OFF | CUPS PER HOUR | DIMENSIONS (D x W x H inches) | NEMA | PLUMBING REQS |
|-------------------------|--------------|--------------------|---------------|-------------------------------|--------|-------------------------------------|
| Ecoboiler UC4 1000747US | 1.5kW @ 110V | 1 GAL | 60 | 15.5 x 5.31 x 23.03 | 515P | 3/8" Compression or 3/8" John Guest |
| Ecosmart UC4 1000750US | 2.4kW @ 230V | 1 GAL | 115 | 15.5 x 5.31 x 23.03 | L6-20P | 3/8" Compression or 3/8" John Guest |
| Ecosmart UC10 1000752US | 5.6kW @ 230V | 2.6 GAL | 311 | 15.5 x 8.89 x 23 | L6-30P | 3/8" Compression or 3/8" John Guest |
| Ecosmart UC45 1000754US | 5.6kW @ 230V | 11.8 GAL | 311 | 19.4 x 16.5 x 25.5 | L6-30P | 3/8" NPT |

FONTS

| NAME ORDER CODE | DIMENSIONS (D x W x H inches) | TAP TO TRAY (inches) |
|---------------------------------------|-------------------------------|----------------------|
| Tubular Font 1000584 | 5.3 X 5.3 X 12.6 | 6.1 |
| Über Font* 1 hose 1000812 | 18.5 x 9.8 x 15.7 | 11.5 |
| Low Profile Über Font 1 Hose 1000812L | 18.5 x 9.8 x 10.7 | 6.8 |

TUBULAR & ÜBER FONTS WITH ECOSMART UC45

| COUNTER CUTOUT | CABINET CLEARANCE | ECOSMART UC45 1000754US | |
|----------------|-------------------|-------------------------|---------------------------|
| | | TUBULAR FONT 1000584 | ÜBER FONT 1000812/1000811 |

* Required for ventilation if the machine is installed in an enclosed cabinet.

ELECTRICAL INSTALLATION PROCEDURE

When installing the machine, always observe the local regulations and standards. The appliance is supplied with a NEMA L6-30P moulded power cord. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install. The wires from the font are terminated in a Mini Fit connector which will plug into a similar Mini Fit connector mounted on the top lid of the undercounter boiler.

PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5 -145psi (100 -1000kPa, 0.1 - 1MPa).
- Requires inline water filter within your water specifications.
- The machine requires either a 3/8" compression, or 3/8" John Guest water connection.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through, especially for new installations. Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted.
- Turn on water and check for leaks.
- If the overflow vent is plumbed it must be plumbed with a tundish device.
- This equipment must be installed with adequate backflow protection to comply with all applicable federal, state and local codes.

OPERATING BOILER FOR THE FIRST TIME

- Check that all installation procedures have been carried out.
- Ensure water valve is on.
- Plug boiler appropriate electrical supply and press power button on the front of the machine marked 'Power'.
- The "power on" light will glow green and the machine will fill to a safe level, above the elements, before heating.
- The "Ready/Status" light will cycle two red flashes while the machine is filling to the safe level.
- After this amount of water has heated to about 95°C the boiler will draw more water in until the temperature drops by 1 or 2 degrees. The boiler will then heat again. This heat fill cycle continues until the boiler is full.
- Whilst the machine is above the safe level and filling, the "Ready/Status" light will remain blank.
- The "Ready/Status" light will glow green when the machine is both full and up to normal operating temperature.
- The boiler is now ready for use.
- The font is simply activated by pressing the button on the top of the font.

NOTE: Because the boiler is electronically controlled no priming is necessary. The element cannot switch on until a safe level of water is reached.

*GOOD TO KNOW

Über font and Low Profile Über Font can be used with two undercounter boilers to dispense two separate temperatures. Use order code 1000811 or 1000811L to order two hose option for use with two boilers.

