 
 


<b>Topic: DIP-Switch Settings</b>		<b>TB No.:10003</b>	<b>Date:27/03/13</b>
<b>Affected Machines:</b>	All Machines Using 1600345 and 1600375 Control PCB's	<b>Priority: Low</b>	<b>Created By:</b> Raymond Daly
<b>From Serial No.:</b>	All Models as Listed Above	<b>Created For:</b>	Field Service
<b>From Date:</b>	27 <sup>th</sup> March 2013	<b>Page: 1/2</b>	


**DIP-Switch Settings for 1600345 PCB**

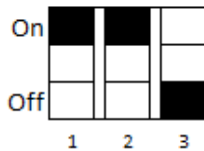

 
Libra 5, Libra BW, Libra 9, Aquarius FC/PB

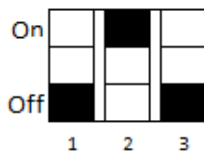


1000609 Libra 5 Manual Fill

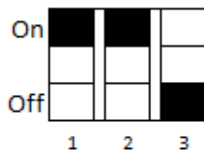

 
1000135 Libra 10, 1000112 Aquarius 12 FC-T

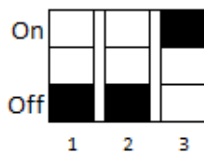

 
1000745 EcoBoiler UC45 8.4kW (2-font), 1000745A EcoBoiler UC45 8.4kW (3-font)  
1000754 EcoSmart UC45 5.6kW (2-font), 1000754A EcoSmart UC45 5.6kW (3-font)

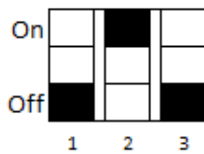

 
Continuous Fill - EcoBoiler 10Ltr & up, EZT, Comet, Aquarius

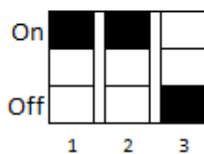

 
Heat Fill - EcoBoiler 10Ltr & up, EZT, Comet, Aquarius

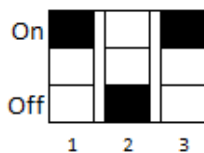

Manual Fill - EcoBoiler 5Ltr, Libra

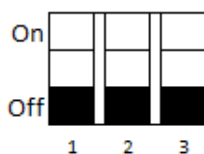 

Manual Fill - Filtro

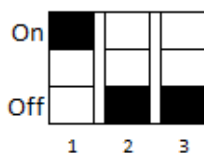 


Auto Fill - Filtro


**DIP-Switch Settings for 1600375 PCB**



 
Filtro Pour Over - Manual Fill

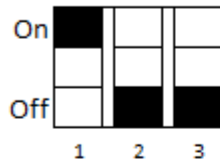

Filtro Pour Over - Auto Fill

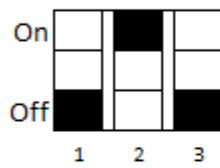 

 
Continuous Fill - EcoBoiler T10 & up, EZT, Comet, Aquarius

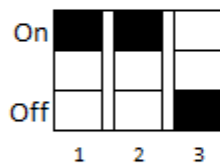


Heat Fill - EcoBoiler T10 & up, EZT, Comet, Aquarius



 Heat Fill - EcoBoiler 5Ltr, Libra

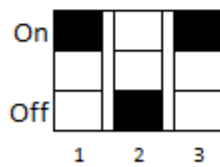

Manual Fill - EcoBoiler 5Ltr, Libra

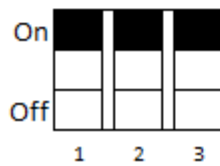 

Uber Boiler, EcoSmart