BREWERS


ACCESSORIES



# JET TWIN 1000855US



#### **DIMENSIONS**

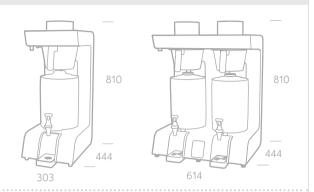

- > Single (1.5 gallon) or Twin (3 gallon) options
- > Pre-set recipe and volume options
- > Variable batch volumes
- > Basket safety lock during brewing

- > Operator friendly and easy-to-use
- > Vacuum insulated urn for energy-efficiency and temperature retention
- > Two power options



PRECISE, PROGRAMMABLE BATCH BREWER FOR HIGHER VOLUME REQUIREMENTS.

PRODUCT INFO	PERFORMANCE SPECS	SIZE	PLUMBING & ELECTRICAL REQS			PACKAGING		
NAME ORDER CODE	FULL BREW	DIMENSIONS (D x W x H inches)	POWER @ 230V	PLUMBING REQS	NEMA	PACKED WEIGHT	PACKAGING DIMENSIONS (L x W x H inches)	QTY/ PALLET
<b>Jet 6 2.8kW</b> 1000851US	1.5 GAL  1.5 GAL (per urn)	16.9 x 11.9 x 33	2.8kW	3/8" Compression or 3/8" John Guest	L6-20P	52.9lb	19.6 x 15.7 x 35.4	6
<b>Jet 6 5.6kW</b> 1000850US			5.6kW		L6-30P			
<b>Jet Twin</b> 1000855US		18.2 x 24.2 x 35.3				106lb	19.6 x 27.9 x 36.2	2


PRODUCT INFO	SIZE	PACKAGING				
NAME ORDER CODE	DIMENSIONS (D x W x H inches)	PACKED WEIGHT	PACKAGING DIMENSIONS (L x W x H inches)	QTY/PALLET		
<b>Jet Urn</b> 1700204	16.5 x 9.6 x 22.4	15.4lbs	25.1 x 12.2 x 17.3	16		
Jet Grinder 1000891	14.5 × 7.4 × 22	55lbs	22.8 x 11.8 x 31.4	12		




## **JET TWIN BATCH BREWER**

### JET TWIN

1000855US

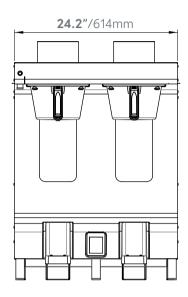

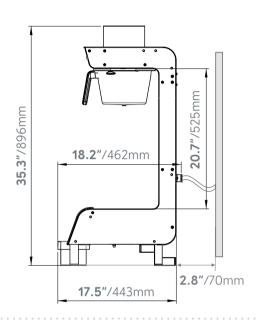

#### **VENTILATION REQUIREMENTS**

- Back: 70mm/2.7"
- Sides: 50mm/1.9"

Clearance required around machine if installed in an enclosed cabinet.

#### **ELECTRICAL INSTALLATION PROCEDURE**

When installing the machine, always observe the local regulations and standards. The appliance is supplied with a NEMA L6-30P power cord. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

#### PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 8 -145psi (55 -1000kPa, 0.05 - 1MPa).
- The inlet water must be potable and free of contaminants.

- Requires inline water filter within your water specifications.
- The machine is supplied with a 3/8" Compression or 3/8" John Guest.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through, Especially for new installations.
- Connect the hose to the inlet valve of the machine.
   Make sure a sealing washer is fitted.
- Turn on water and check for leaks.

# OPERATING THE APPLIANCE FOR THE FIRST TIME

- Check that all installation procedures have been carried out.
- Ensure water valve is on. Plug machine into an appropriate electrical supply and switch on the rocker switch under the machine. Follow the instructions on the screen.