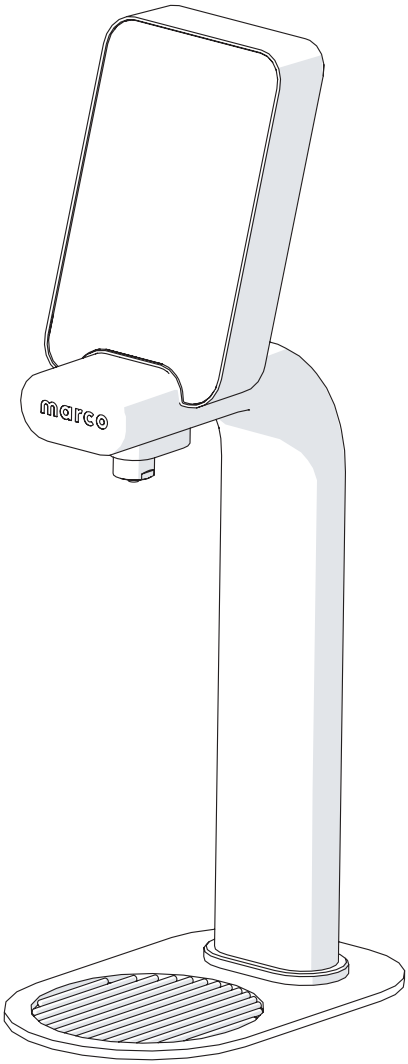


Instruction Manual: 1900945
Machine P/N: 1000990
Rev 5

POUR'D TOUCH

Contents


1. Font Box Contents....2
2. Counter Cut-Out....3
3. Installation....4
    - No Drip Tray....4
    - Drip Tray....5
    - Connecting Hoses with POUR'D Touch....6
    - POUR'D Touch Font with Boiler....6
    - POUR'D Touch Font with Chiller....7
    - POUR'D Touch Font with Boiler & Chiller....8
    - Configuration....9
4. Priming....11
5. Calibration....12
6. Operator Settings....13
    - Set Recipes....13
    - Cleaning....14
7. Cleaning & Maintenance....16
8. Advanced Settings....17
    - Accessing Advanced Settings....17
    - General Settings....18
    - Quick Dispense Mode....18
    - USB Connection....19
    - Graphics....20
    - Software Update....22
    - Service....22
    - Error Log....23
9. Operating Font....24
10. Troubleshooting....25

Font Box Contents

Part Number	Description	Qty
1000990	POUR'D Touch Font	1
1800623	Drip tray hose (grey soft tubing)	0.5M
1800630	Vent hose (clear soft tubing)	0.5M
2301250	Hot tube to boiler (clear 8mm tubing)	1
1400818	Straight Union 1/4" - 1/4"	2
1400819	Straight Union 8mm-8mm	1
1400820	8mm-1/4" reducer	1
1401659	Reducer Connector 8mm-10mm	1
1860551	POUR'D Touch Drip Tray	1
1860552	POUR'D Touch Drip Tray Insert	1
1900945	Instruction Manual POUR'D Touch Font	1


Counter Cut Out


- The 100mm /4" cut out is only required for the font with drip tray.
- The font without drip tray requires the 32mm / 1 ¼" cut out only.
- Use a 32mm/ 1 ¼" & a 100mm /4" circular hole saw piece to make the holes.

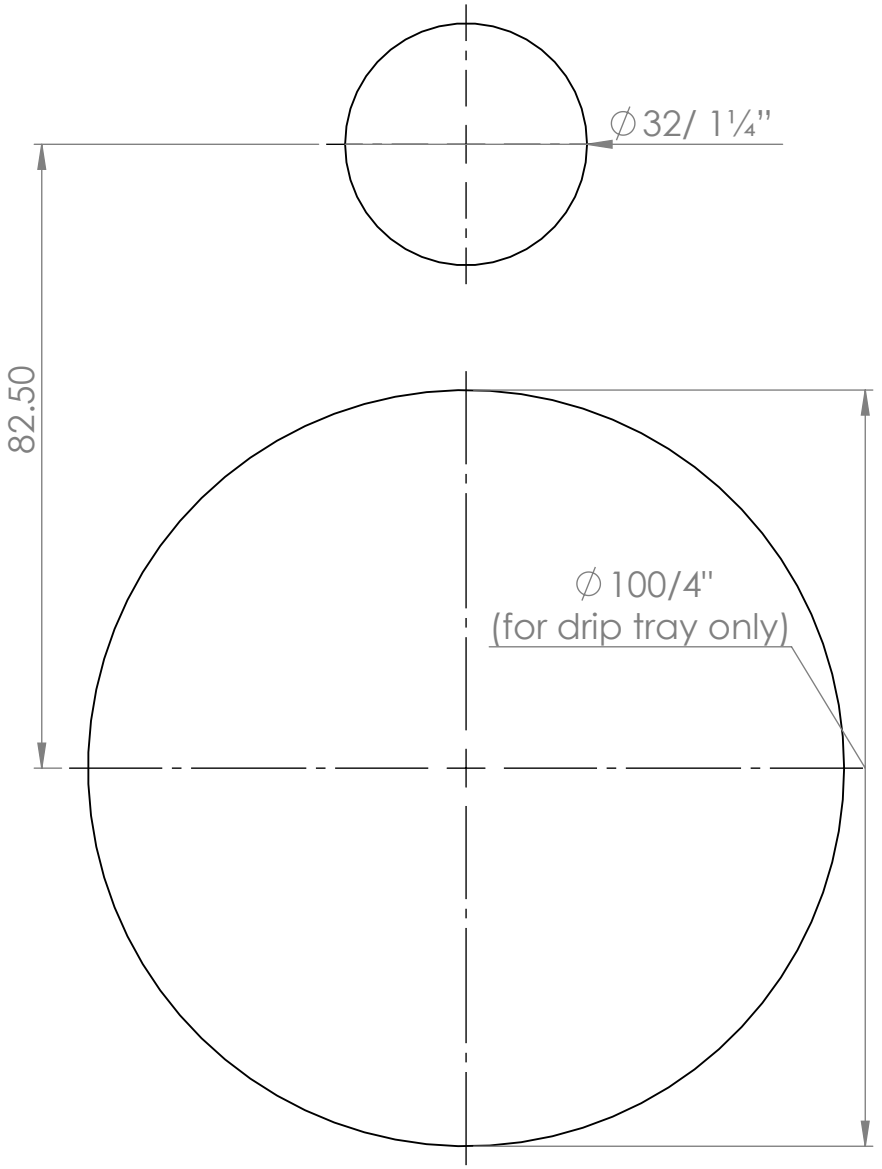



Installation


1. No Drip Tray

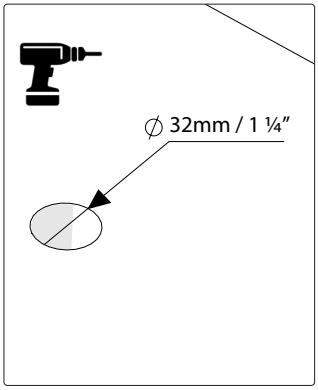


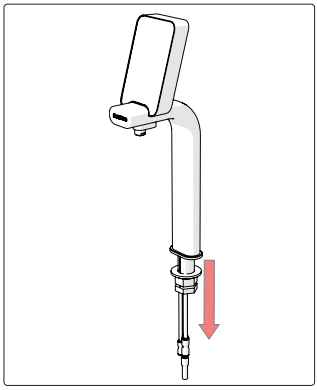


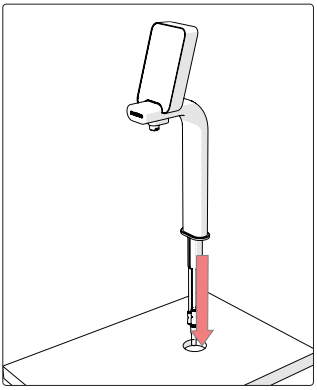

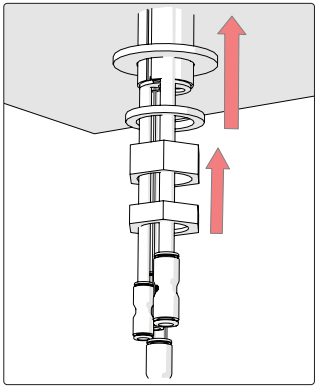

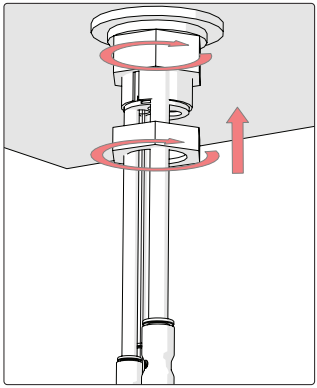


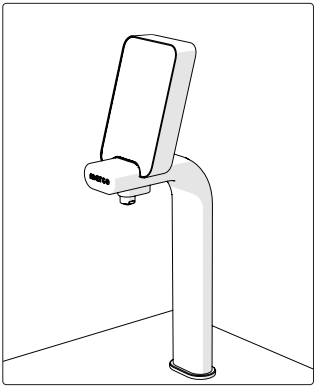


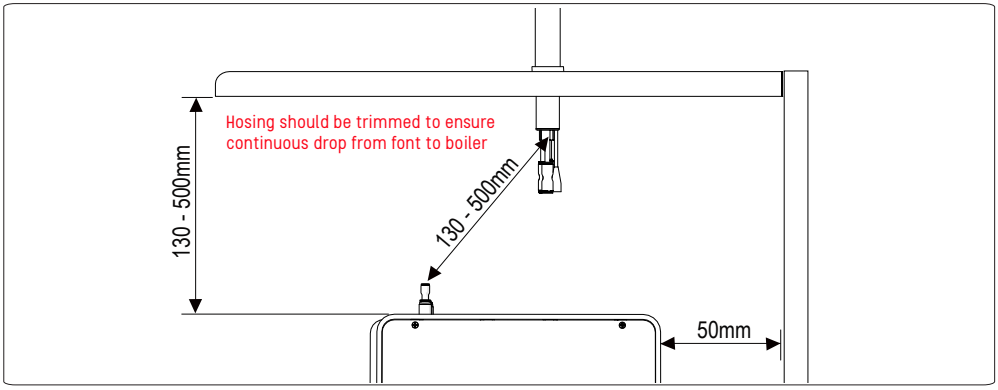



Installation


2. Drip Tray

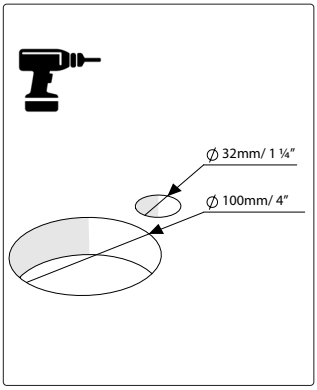


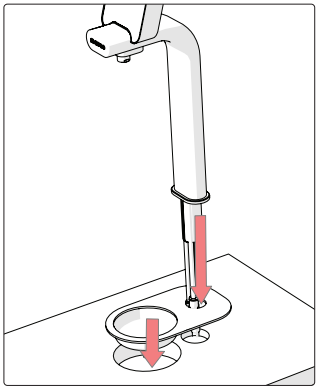


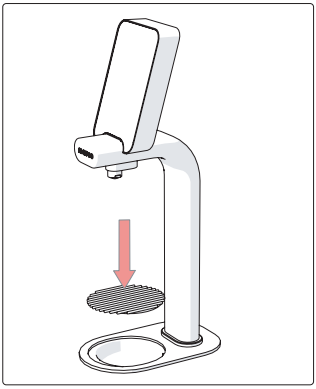

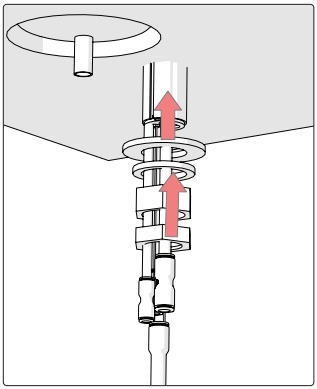

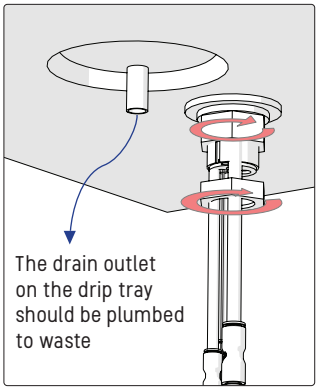


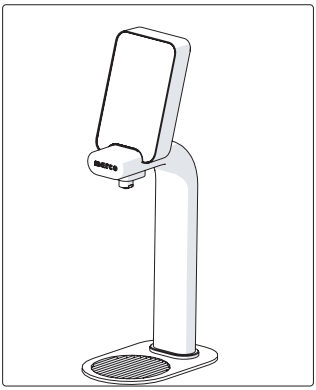

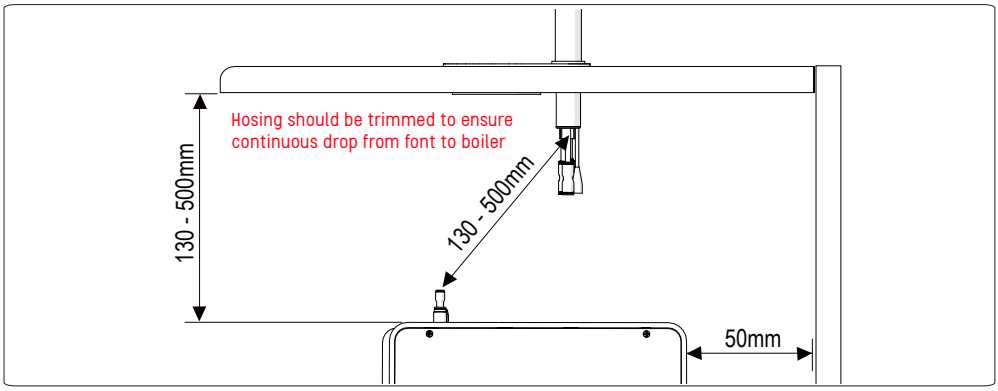


Installation

Connecting Hoses with POUR'D Touch Control Box

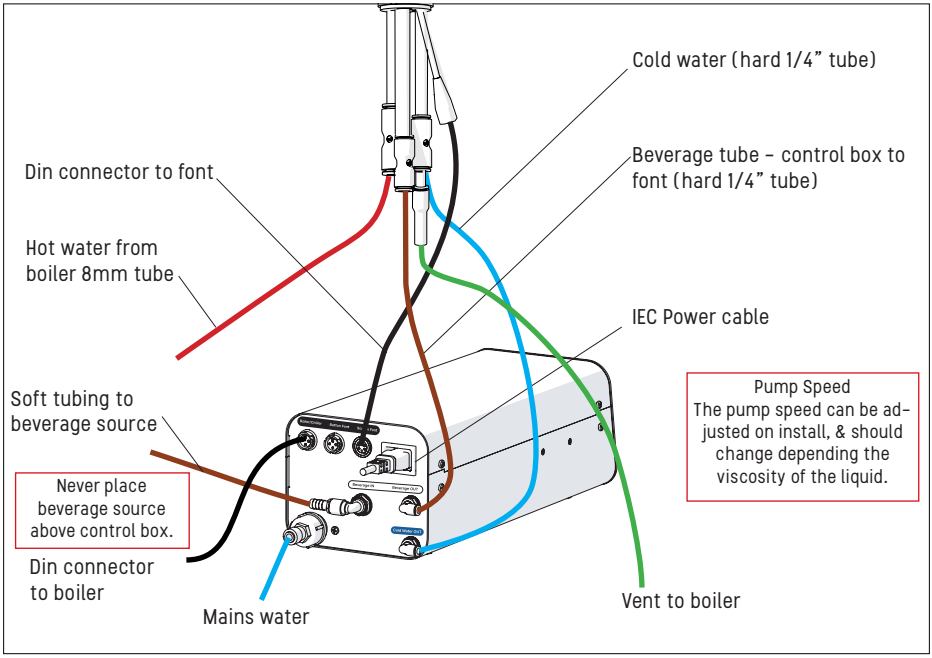


POUR'D Touch Font with Boiler

Beverage Option – Diluted concentrate with hot or ambient water & concentrate shot

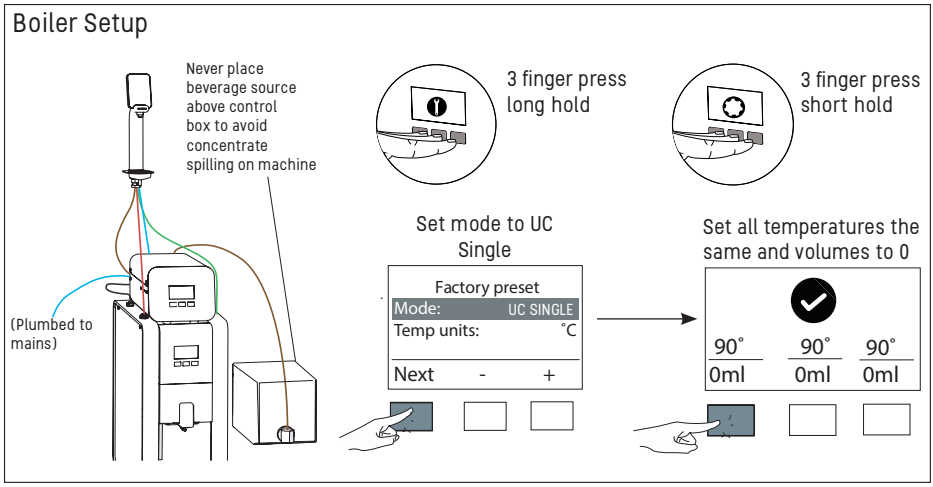


POUR'D Touch Font with Chiller

Beverage Option – Diluted concentrate with cold, sparkling or ambient water & concentrate shot

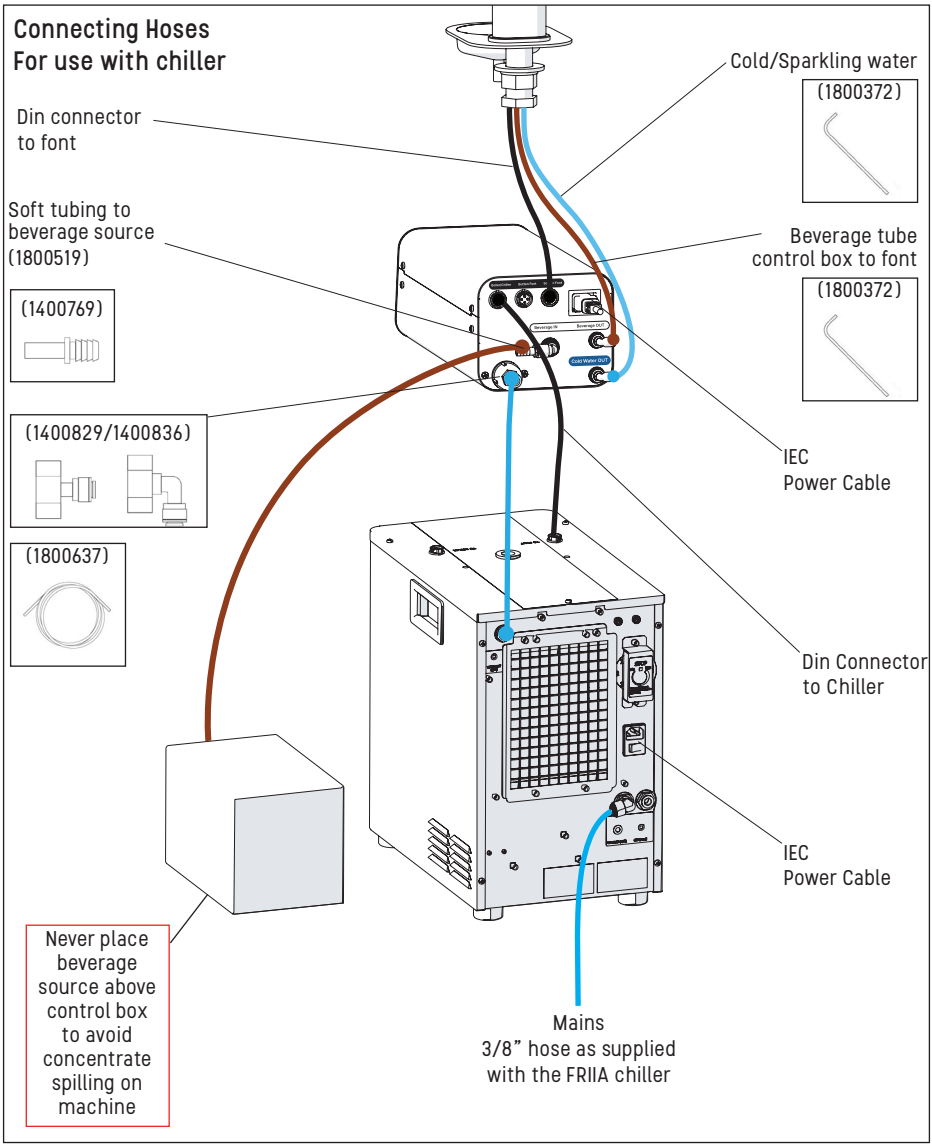

POUR'D Touch Font with Boiler and Chiller

Beverage Option – Diluted concentrate with hot, cold, sparkling or ambient water & concentrate shot

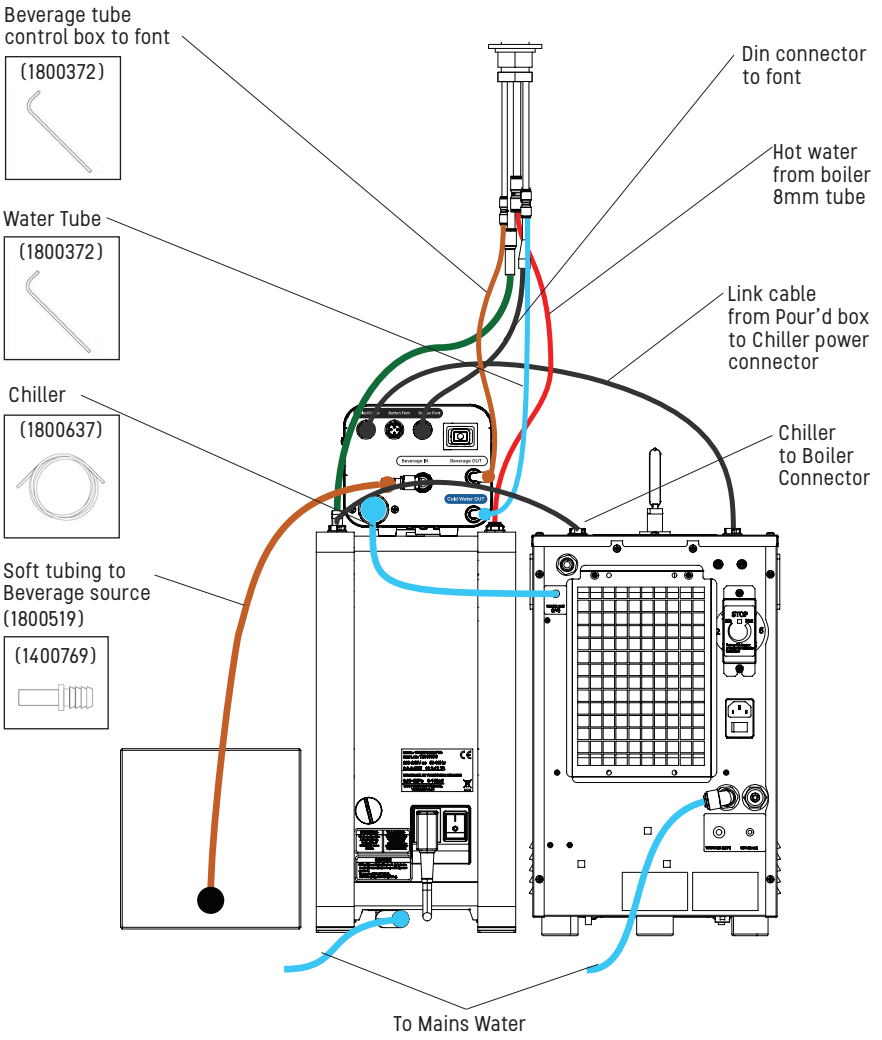


When using a boiler and a chiller together, call a service technician to turn off the boiler safety feature on the chiller before use to enable the boiler.

Configuration

When the machine is turned on for the first time, the machine configuration must be set in the **Advanced Settings**.


1. Home Screen

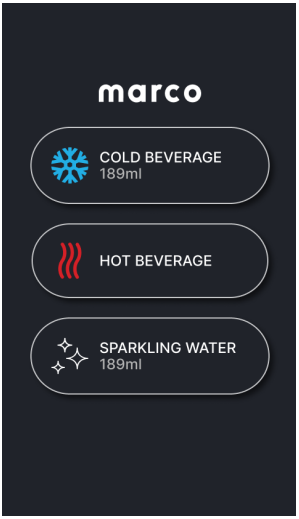

2. Press and hold the bottom right corner of the Home Screen for 5 seconds to access Operator Settings Screen.



3. Operator Settings Screen

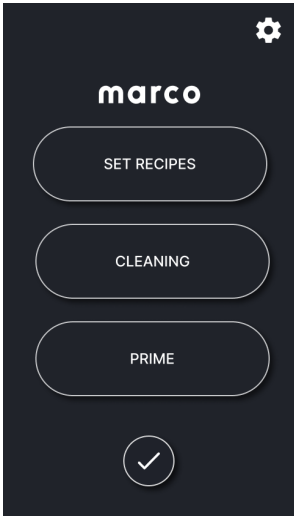


4. Press the settings icon (top right) to access Avanced Settings menu.



5. Enter PIN
Default PIN: 0000




6. Advanced Settings Screen

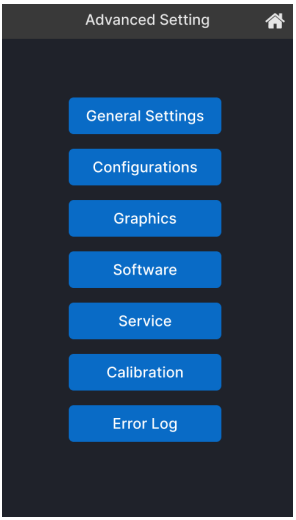

7. Use the toggle switches to indicate the connected devices




8. Configuration Screen

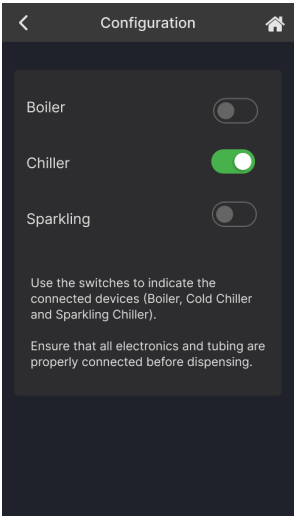


Priming

Before using the machine for the first time, the machine needs to be primed.
All beverage lines need to be primed before the machine is calibrated.
Priming is in '**Operator Settings**'. Before priming, place a vessel under the font.

1.

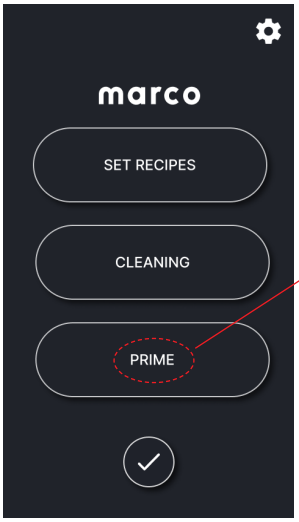

2.

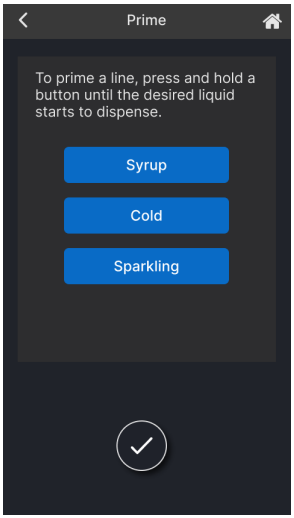

To prime a line, press and hold a button until the desired liquid starts to dispense.

3.




4.




Calibration

Before using the machine for the first time, the machine needs to be calibrated. Calibration is in '**Advanced Settings**'.


1. Advanced Settings

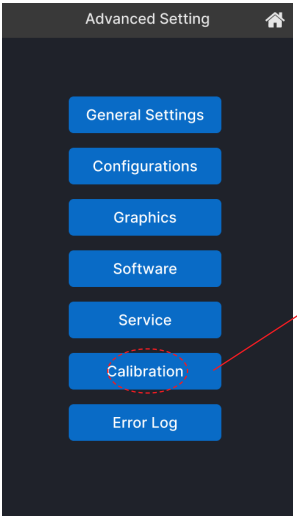

2. Calibration Screen

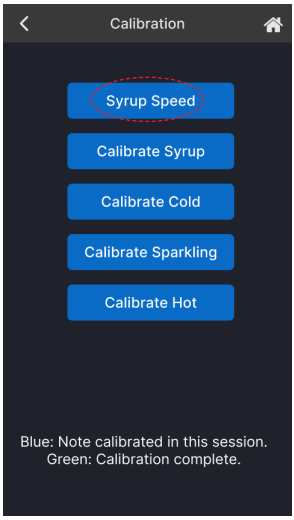

3. The max & min pump speed needs to be set before calibration, this is set on the "**Syrup Speed**" page.

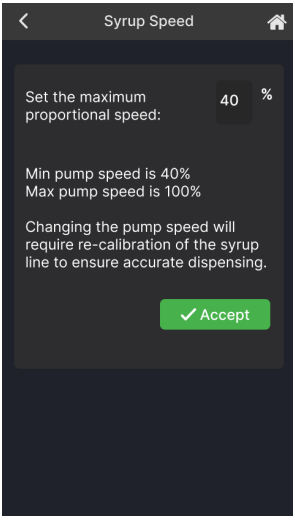

Calibration Steps

1. Set the max & min pump speed.

2.Perform a full calibration for syrup, cold, sparkling, and hot lines (if applicable).

3. Equipment needed: scales and vessel.

4. Follow the on-screen instructions for each step.


NOTE: 'Dispensed weight' refers to the weight of the liquid dispensed; therefore, the weight of the container used must be deducted.

Operator Settings

Accessing Operator Settings

1. Home Screen – Press & hold the bottom right corner of the Home Screen for 5 seconds.

2. Operator Settings Screen

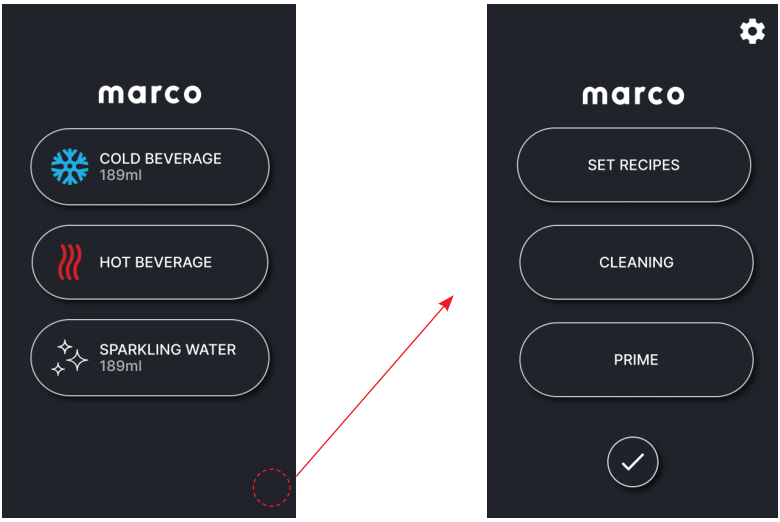


Set Recipes

Recipes are set in the “Operator Settings” screen. Up to 3 Recipes can be saved at a time. To delete Recips select the “X” beside the Recipe.


1.

2. Edit Recipe Screen

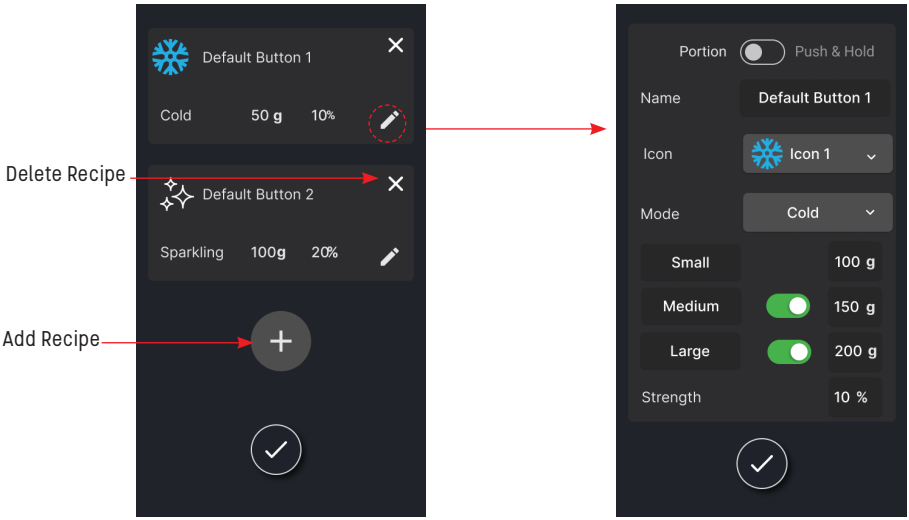

Cleaning

Cleaning must be done daily and is accessed via the “Operator Settings” screen.

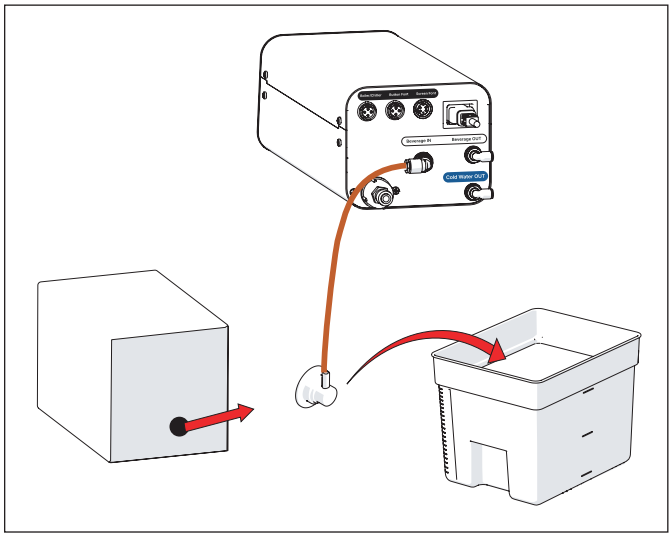

1. Disconnect the tubing from beverage source.

2. Put the tubing into a bucket of cleaning solution.


We recommend using Urnex Cafiza 2 for coffee-based beverages or Urnex Rinza Milk System cleaner for alternative milk (follow Urnex instructions).

Use a separate container to collect the wastewater, we recommend using a large container or jug, due to the high pump speed.

3. Press and hold the bottom right corner of the Home Screen for 5 seconds to access the Operator Settings Screen.




4. Select “Cleaning” in “**Operator Settings**” and press “**Clean Now**” & follow the instructions on the screen.

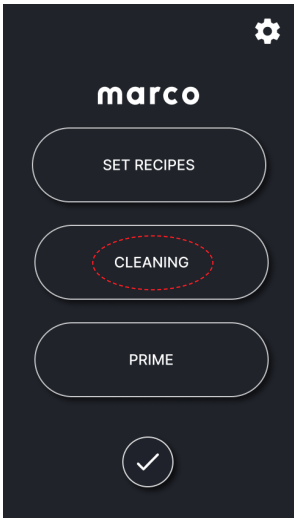

5. Process will take 170 seconds and use 1.5L of water + Solution required per cycle.

6. Once the program is finished replace cleaning solution with clean ambient/cold water. (2L per cycle)

7. Press “Clean Now” on the screen.

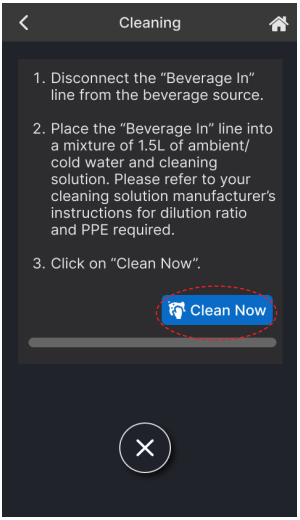


8. Repeat until water comes out clear.

9. Reconnect the line to the beverage source.

LEAVE THE LINE EMPTY OVERNIGHT

Cleaning & Maintenance

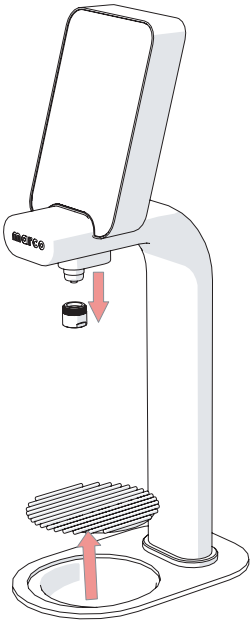

RISK OF SCALDING

Turn off the control box before cleaning to prevent accidental triggering of a dispense.

Beware of accidentally operating the font – especially when cleaning around the screen.

The appliance may not be immersed in water or cleaning solution . The exterior of this font may be cleaned with a damp cloth and a light detergent. The external surfaces of the appliance must not be cleaned by a water jet.

For cleaning the internal tubing and components, the recommended cleaning solution is Urnex Cafiza cleaner.


Twist off and wash out flow straightener.

Do not use abrasive cloths or creams, as this will spoil the finish of the font.


Advanced Settings

Accessing Advanced Settings

1. **Home Screen** – Press & hold the bottom right corner of the Home Screen for 5 seconds.

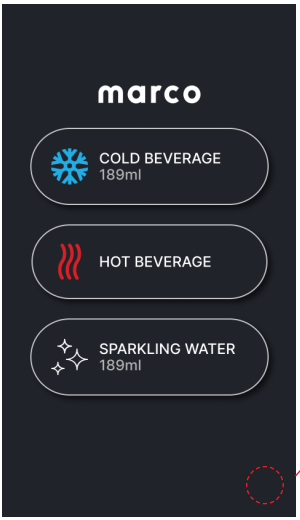


2. **Operator Settings Screen** – Press the settings icon (top right) to access Avanced Settings menu.

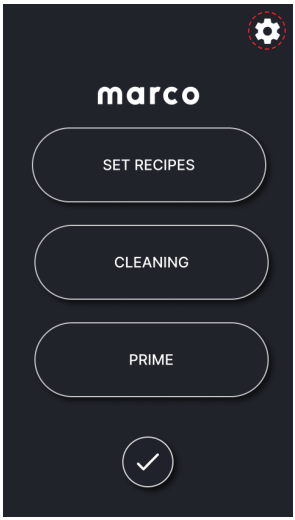

3. Enter PIN
   Default PIN: 0000



4. Advanced Settings Screen

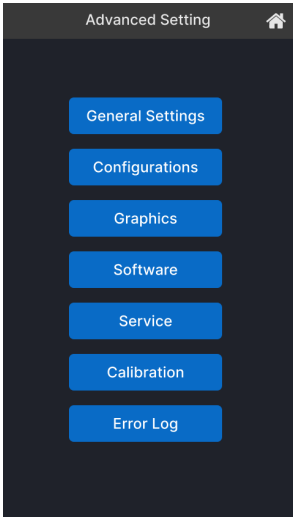


Advanced Settings


General Settings

Change PIN, Language, Unit Settings, Reset Factory Settings and Quick Dispense.

1.

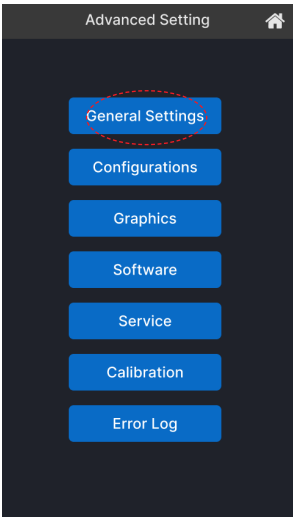


2.

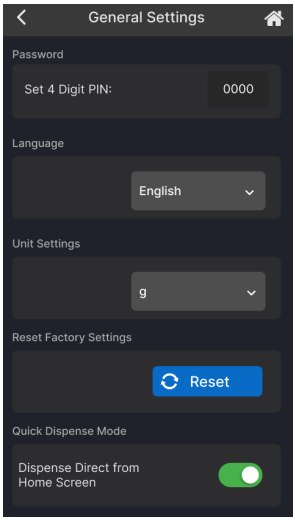


Quick Dispense Mode

Enables Push & Hold directly from the Home Screen.

1.

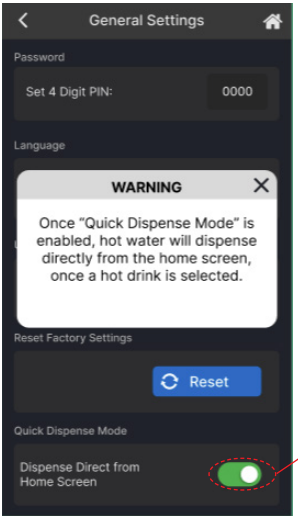


2. Red thick boarder appears around button that is dispensing

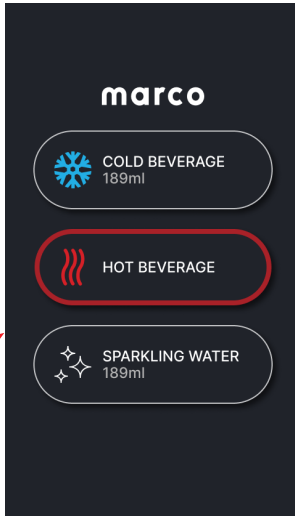


USB Connection

USB connection is required for uploading graphics, downloading the error log, and updating the software.


1.

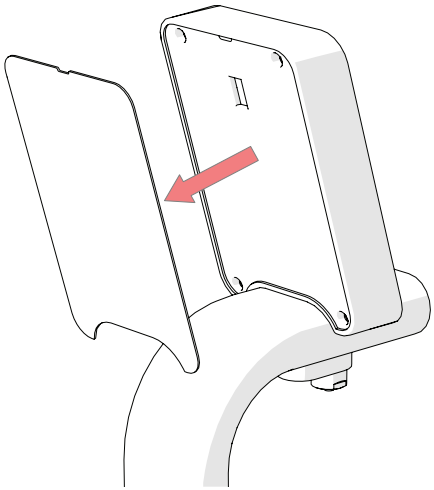


2.

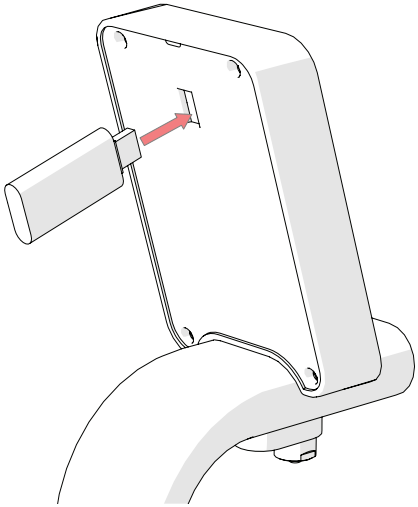

3.

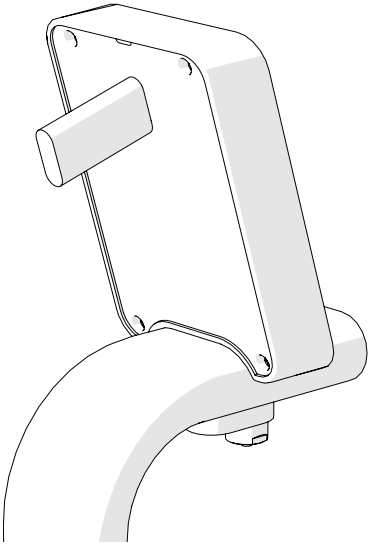

4.

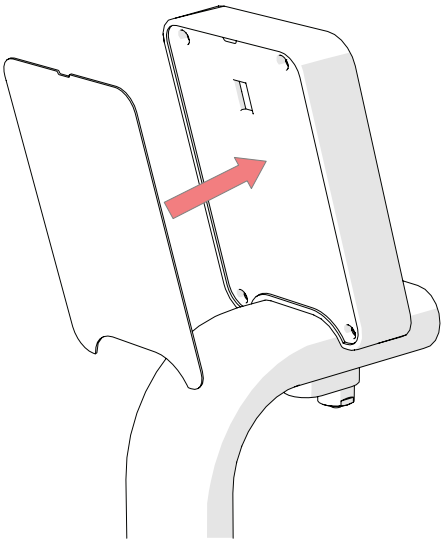


Advanced Settings

Graphics

Enable screen saver, upload / change Backgrounds and Icons.

1. Screen Saver

2.

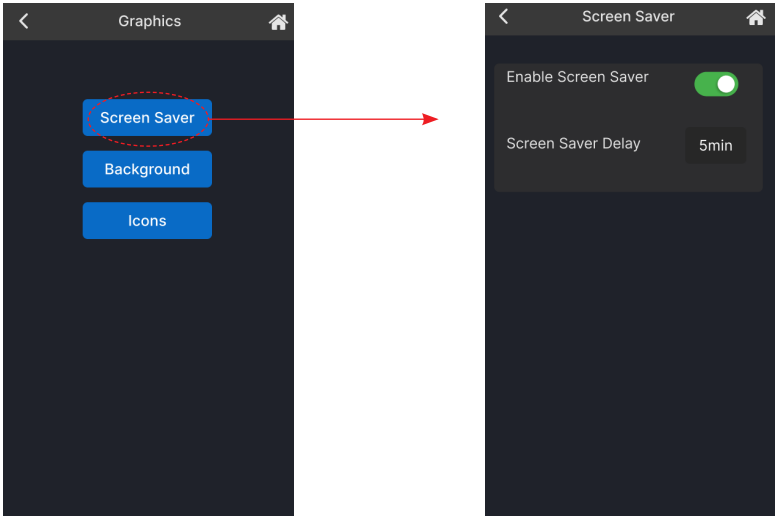


Uploading Backgrounds

Insert a USB key formatted as 'FAT32', containing x6 png files (480 x 854 pixels) & follow the instructions on screen.

1.

2.

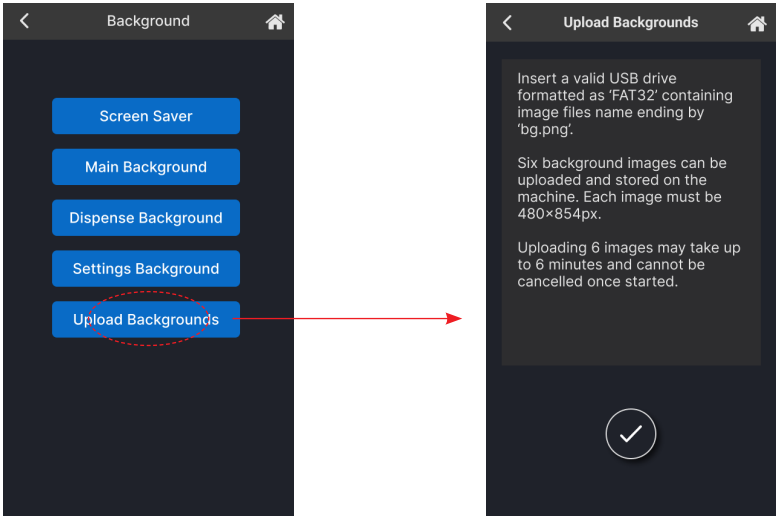


Advanced Settings


Icons

Icons can be uploaded and renamed. Insert a USB key formatted as 'FAT32', containing x6 png files (64 x 64 pixels) & follow the instructions on screen.


1.

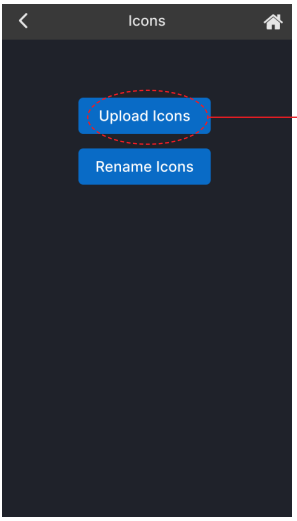


2.

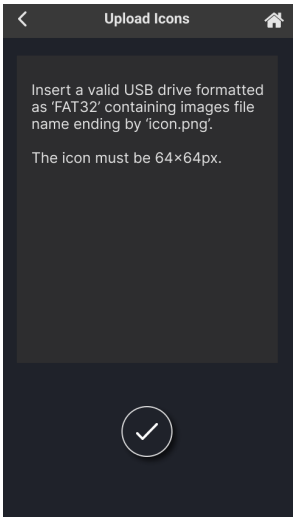

1. Renaming Icons

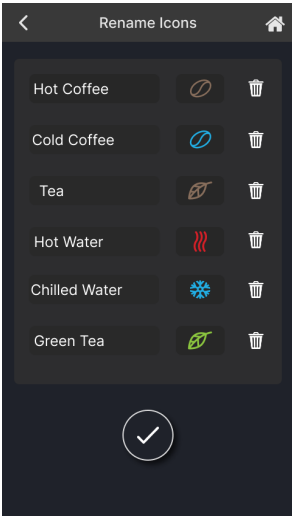

2.

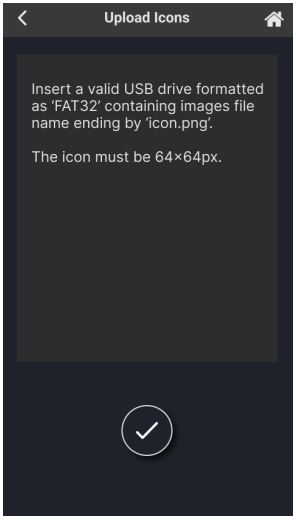


Advanced Settings


Software Update

The software can be updated via USB key. Insert a USB key formatted as 'FAT32' with the latest version of software & follow the instructions on screen.

1.

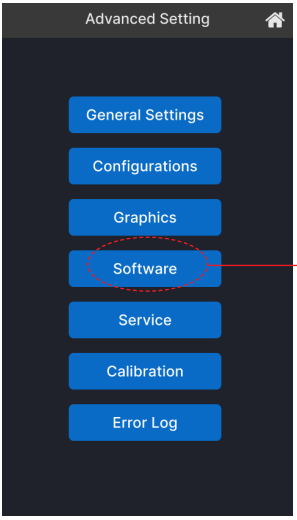


2.

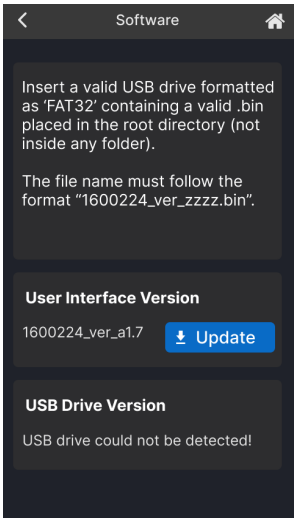


Service

Test Outputs and QR code for Service Manual

1.

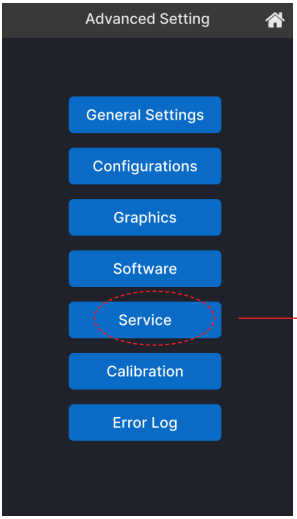

2.

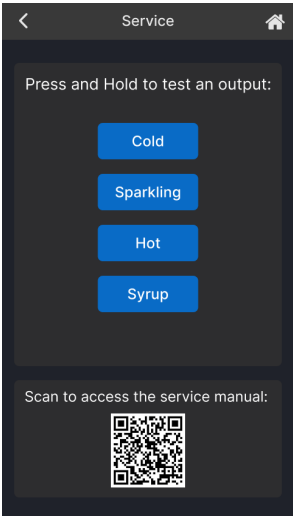


Advanced Settings


Error Log

Records details of errors in the machine as a text file. Service personnel can download the text file to a USB stick to analyse.

1.

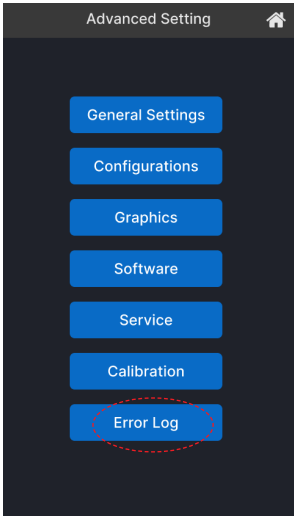

2.

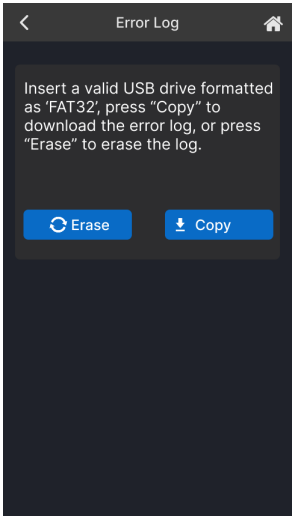

Push & Hold

Beverage will dispense while the button is pressed and stop once released.
Beverage volume is not displayed under push & hold recipes.

1.




2.




Push & Release (Volumetric)

Dispenses a pre-defined volume of beverage (set in Recipe).
Beverage volume displayed under push & release (volumetric) recipes.

1.

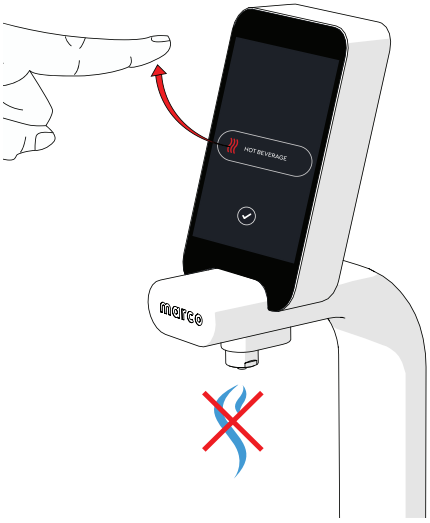


2.

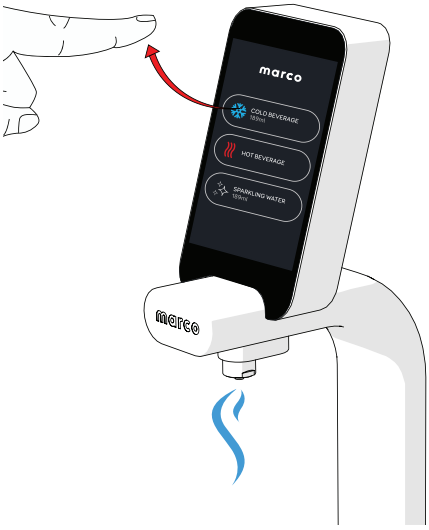

Troubleshooting

The screen of the machine indicates various errors or problems with the machine. See diagnostic table below for futher details.

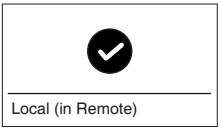SCREEN DISPLAY	ACTION
No Water	Check mains water pressure, if pressure is okay then call service technician
Comms error	Check control box screen, should display the idle screen. If any other screen is displayed (settings screens), return to idle screen to fix error.  (idle screen)

Marco Beverage Systems Limited.
63d Heather Road,
Sandyford Industrial Estate,
Dublin 18
t: +353 (0)1 295 2674
f: +353 (0)1 295 3715
e: sales@marco.ie
www.marcobeveragesystems.com

