
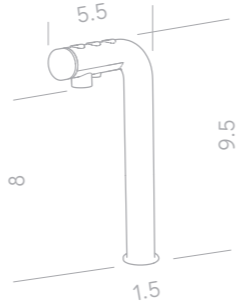


MIX FONTS WITH UNDERCOUNTER WATER BOILERS

MIX FONTS WITH UNDERCOUNTER WATER BOILERS

MIX 3 BUTTON FONT 1000879	MIX 1 BUTTON FONT 1000878	DIMENSIONS
		
<ul style="list-style-type: none"> 0.8 or 2.1 gallon options Vacuum insulated tank for up to 70% more energy-efficiency Autofill/plumbed 	<ul style="list-style-type: none"> Counter cutouts required 7.5 gallons output per hour 156 cups per hour 	

ASSOCIATED PRODUCTS (SOLD SEPARATELY)

REQUIRED		OPTIONAL
MIX UC3 1000880US	MIX UC8 1000887US	DRIP TRAY 2300268
	OR 	

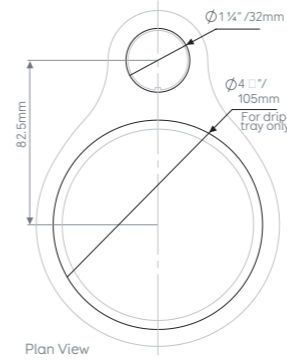
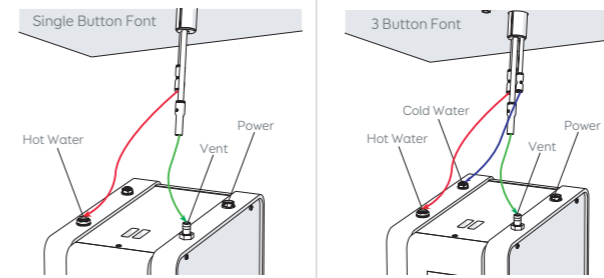
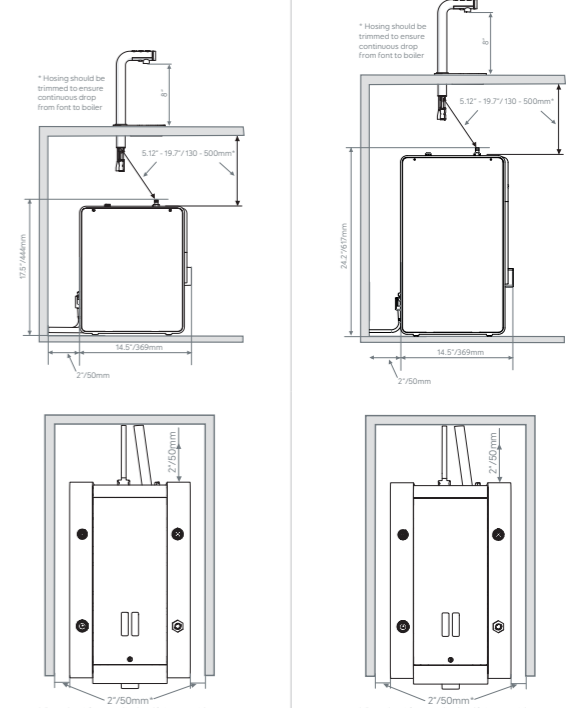
BOILERS

NAME ORDER CODE	POWER @ 230V	IMMEDIATE DRAW OFF	DIMENSIONS (D x W x H inches)	NEMA	PLUMBING REQS
MIX UC3 1000880US	2.8kW	0.8 GAL	15 x 8.5 x 17.5	L6-20P	3/8" Compression or 3/8" John Guest
MIX UC8 1000887US	2.8kW	2.1 GAL	15 x 8.5 x 24	L6-20P	3/8" Compression or 3/8" John Guest

FONTS & ACCESSORIES

NAME ORDER CODE	DIMENSIONS (D x W x H inches)	TAP TO TRAY (inches)
MIX 1 Button Font 1000878	5.5 x 1.5 x 9.5	8
MIX 3 Button Font 1000879	5.5 x 1.5 x 9.5	8
MIX Drip Tray 2300268	7 x 5 x 1.5	—

STYLISH, SPACE-SAVING FONT WITH PROGRAMMABLE UNDERCOUNTER BOILER TO DISPENSE THREE TEMPERATURES, THREE VOLUMES IN AN INSTANT.

MIX UC3 & MIX UC8		MIX 3 BUTTON FONT 1000879 MIX 1 BUTTON FONT 1000878
COUNTER CUTOUT		MIX UC3 1000880US MIX UC8 1000887US
 <p>Plan View</p>		
		 <p>* Hosing should be trimmed to ensure continuous drip from front to boiler.</p> <p>* Hosing should be trimmed to ensure continuous drip from front to boiler.</p> <p>* Required for ventilation if the machine is installed in an enclosed cabinet.</p> <p>* Required for ventilation if the machine is installed in an enclosed cabinet.</p>
<h3>ELECTRICAL INSTALLATION PROCEDURE</h3> <p>When installing the machine, always observe the local regulations and standards. The appliance is supplied with a NEMA L6-20P moulded power cord. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.</p>		<h3>OPERATING BOILER FOR THE FIRST TIME</h3> <ul style="list-style-type: none"> Check that all installation procedures have been carried out. Ensure water valve is on. Plug boiler into suitable socket. Turn on the power switch. The "Wait" progress circle will be visible on the screen and the machine will fill to a safe level, above the elements, before heating. The "Ready" tick will come up on screen when the machine is full and up to normal operating temperature (approx. 10/20 mins.). The boiler is now ready for use - the display will show the button settings and the "Ready" status tick. The Boiler may now be used to dispense Hot Water to the preset factory settings. <p>NOTE: Because the boiler is electronically controlled no priming is necessary. The element cannot switch on until a safe level of water is reached.</p>
<h3>PLUMBING INSTALLATION PROCEDURE</h3> <ul style="list-style-type: none"> Ensure that the equipment is installed according to local plumbing & water regulations. Mains water pressure required (limits): 14.5 -145psi (100 -1000kPa, 0.1 - 1MPa). Requires inline water filter within your water specifications. The machine requires either a 3/8" compression, or 3/8" John Guest water connection. Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through. Especially for new installations. Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted. Turn on water and check for leaks. 		