


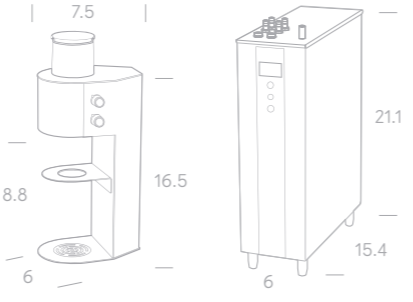
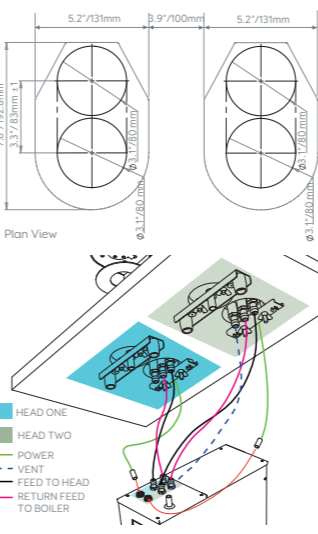
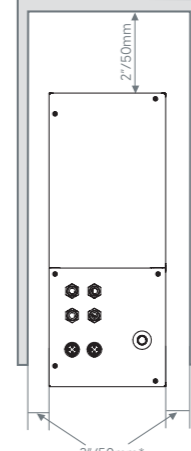
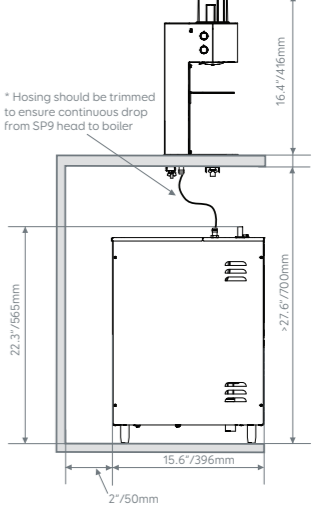


SP9 SINGLE 1000832US	SP9 TWIN 1000833US	SP9 BOILER	DIMENSIONS
			
<ul style="list-style-type: none"> Compatible with most manual pourover brewing devices (e.g. Chemex, Kalita, Hario) Precise water temperature 		<ul style="list-style-type: none"> Analog interface Preset brewing time (1 to 5 minutes) Preset volume (150 to 750ml) 	

SP9 SINGLE-SERVE PRECISION BREWER

COUNTER CUTOUT	CABINET CLEARANCE	SP9 SINGLE 1000832US SP9 TWIN 1000833US
	 <p>* Required for ventilation if the machine is installed in an enclosed cabinet.</p>	 <p>* Hosing should be trimmed to ensure continuous drop from SP9 head to boiler</p>

SINGLE-SERVE UNDERCOUNTER PRECISION BREWER.

OPTIONAL

MIX 1 BUTTON FONT 1000878	MIX DRIP TRAY 2300268
	

MIX 1 button font can be used with SP9 boiler and single head.
Note: single temperature only.

NAME ORDER CODE	POWER @ 230V	IMMEDIATE DRAW OFF	CUPS PER HOUR	HEAD DIMENSIONS (D x W x H inches)	UNDERCOUNTER BOILER DIMENSIONS (D X W X H inches)	NEMA	TAP TO TRAY (inches)	PLUMBING REQS
SP9 Head only 1000830	—	—	—	7.5 x 6 x 16.5	—	—	8.8	—
SP9 Single Head w/Boiler 1000832US	2.4kW	1 GAL	25	7.5 x 6 x 16.5	15.4 x 6 x 21.1	L6-20P	8.8	3/8" Compression or 3/8" John Guest
SP9 Twin Head w/Boiler 1000833US	2.4kW	1 GAL	50	7.5 x 6 x 16.5 (per head)	15.4 x 6 x 21.1	L6-20P	8.8	3/8" Compression or 3/8" John Guest

NAME ORDER CODE	DIMENSIONS (D x W x H inches)	TAP TO TRAY (inches)
MIX 1 Button Font 1000878	5.5 x 1.5 x 9.5	8
MIX Drip Tray 2300268	7 x 5 x 1.5	—

ELECTRICAL INSTALLATION PROCEDURE

When installing the machine, always observe the local regulations and standards. The appliance is supplied with a NEMA L6-20P power cord. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5-145psi (100 -1000kPa, 0.1 - 1MPa).
- Requires inline water filter within your water specifications.
- The machine is supplied with a 3/8 NPT connection.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through. Especially for new installations.
- Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted.
- Turn on water and check for leaks.
- The SP9 Head has a drip tray attached with a drain outlet which should be plumbed to waste.

OPERATING BOILER FOR THE FIRST TIME

- Check that all installation procedures have been carried out.
 - Ensure the water valve is on.
 - Plug in the SP9 Boiler to an appropriate electrical supply and press the power button on the front of the machine.
 - The light will glow green and the machine will fill to a safe level, above the elements, before heating.
 - The "Ready/Status" light will cycle two red flashes while the machine is filling to the safe level.
 - After this amount of water has heated to the set point the machine will draw more water in until the temperature drops by 1 or 2 degrees. The machine will then heat again. This heat fill cycle continues until the SP9 Boiler is full.
 - Whilst the machine is above the safe level and filling, the "Ready/Status" light will remain blank.
 - The "Ready/Status" light will glow green when the machine is both full and up to normal operating temperature.
 - The SP9 Boiler takes 15 minutes to heat up initially.
 - The SP9 Boiler is now ready for use.
- NOTE:** Because the machine is electronically controlled no priming is necessary.

ASSOCIATED PRODUCTS (SOLD SEPARATELY)

BOILERS & HEADS

FONTS & ACCESSORIES