
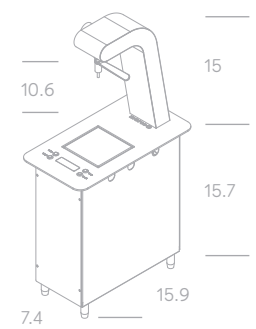
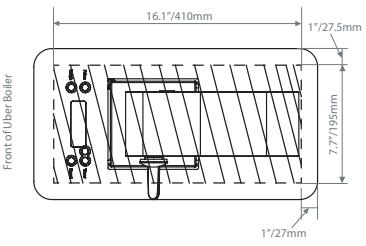
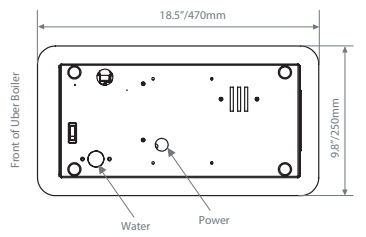
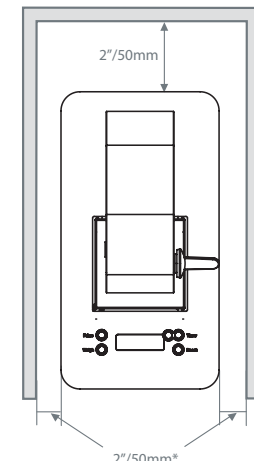
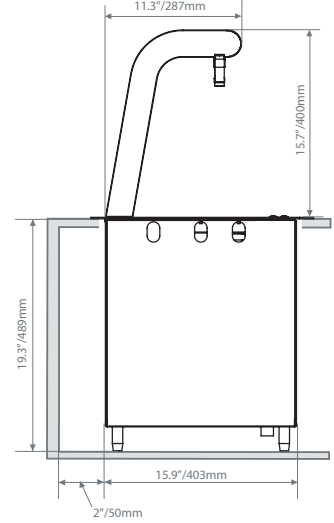


<p>ÜBER BOILER 1000680US</p> 	<p>DIMENSIONS</p> 
<ul style="list-style-type: none"> Built in water drain, scales and timer 0.1° water accuracy with patented ALogic™ software 7.5 gallons output per hour 	<ul style="list-style-type: none"> Variable manual control flow rate Joystick for direction flow control 156 cups per hour

HIGHLY PRECISE MANUAL BREWING STATION FOR PERFECT POUROVER COFFEE OR SPECIALTY TEA.

NAME ORDER CODE	POWER @ 230V	IMMEDIATE DRAW OFF	ABOVE COUNTER DIMENSIONS (D x W x H inches)	UNDERCOUNTER DIMENSIONS (D X W X H inches)	NEMA	TAP TO TRAY (inches)	PLUMBING REQS
Über Boiler 1000680US	2.8kW	1.5 GAL	18.5 x 9.8 x 15	15.9 x 7.4 x 15.7	L6-20P	10.6	3/8" NPT

<p>ÜBER BOILER</p> <p>COUNTER CUTOUT</p>  <p>Front of Über Boiler</p> <p>Boiler Connections to Front</p> 	<p>CABINET CLEARANCE</p>  <p>* Required for ventilation if the machine is installed in an enclosed cabinet.</p>	<p>ÜBER BOILER 1000680US</p> 
---	---	---

ELECTRICAL INSTALLATION PROCEDURE

When installing the machine, always observe the local regulations and standards. The boiler is supplied with a NEMA L6-20P moulded power cord. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5-145psi (100 -1000kPa, 0.1 - 1MPa).
- Requires inline water filter within your water specifications.
- The machine requires either a 3/8" compression, or 3/8" John Guest water connection.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through. Especially for new installations.
- Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted.
- Turn on water and check for leaks.
- This equipment must be installed with adequate backflow protection to comply with all applicable federal, state and local codes.

OPERATING BOILER FOR THE FIRST TIME

- Check that all installation procedures have been carried out.
- Ensure water valve is on.
- Plug boiler into an appropriate electrical supply and press power button located under the bottom of the tank unit.
- The boiler unit will then take in water to the middle level probe and then commence heating.
- The display will show PRIME FILL and the TANK TEMP will show the temperature of the water in the tank.
- Once the temperature reaches the value set as standby the boiler will continue filling the tank in short bursts to maintain constant temperature.
- The display will show PRIME READY at this stage and the BOOST button will be enabled.
- Once the water level in the tank has reached the high level probe (full) the heater will turn off and display will show PRIME READY FULL.
- The boiler is now ready for use.